

1059925

Cat-back 3" w/dual 2-1/2" tail pipes w/welded muffler

Application: 1996-1997 Camaro/Firebird w/350 V8
1998-2002 Camaro/Firebird w/350 V8

Kit Includes:

- 2) 2-1/2" clamps
- 2) 3" clamps
- 1) 2-3/4" clamp
- 1) threaded hanger single hook #2796—for 98-02
- 1) threaded hanger double hook #2795—for 96-97

Kit Includes:

- 1) front extension pipe—1059925-1
- 1) rear over the axle pipe—1059925-2
- 1) driver side tail pipe—1059925-3
- 1) passenger side tail pipe—1059925-4
- 1) welded muffler #58742

DANGER WARNING: Should the purchaser decide to install this exhaust product at home, be warned that pleasure car or light duty truck/van "bumper" jacks are intended for emergency use only. The use of frame contact jack stands in conjunction with a floor jack as main support is highly recommended to minimize accidental dropping of a vehicle while the installation proceeds. We recommend the use of a shop hoist if possible. Please use caution!!


Limitation of liability—Disclaimers: The regulation of emissions production, noise levels and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns and counties.

The manufacturer makes no warranties of merchantability, of fitness for a particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations or ordinances in the states where they may be sold to the ultimate purchaser, the consumer.

The entire risk as to the conformity of this product in any such state and as to repair, should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, and or repair.

The foregoing statement limits the liability of the manufacturer.

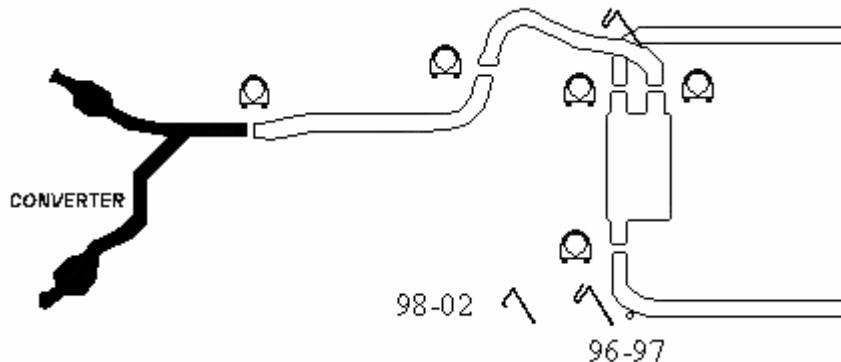

Heartthrob exhaust systems are manufactured by Heartthrob Exhaust--Litchfield, MN

Email us at mike@heartthrobexhaust.com with any questions. www.heartthrobexhaust.com

320-693-0222

#1059925

Instructions:

NOTE: DO NOT TIGHTEN ANY BOLTS OR CLAMPS UNTIL THE LAST STEP!! READ THESE INSTRUCTIONS THOROUGHLY AND FULLY BEFORE YOU BEGIN.

- 1) Support the vehicle in a safe manner using either a shop hoist or with frame supports. The rear axle will need to hang free to allow clearance for the removal and installation of the over the axle pipe. We also recommend lowering the driver's side of the upper control arm to install this system. This will require removal of the 3 metric bolts from the control arm to the frame, and removing two metric bolts from a heat shield. You will need to reuse these bolts for reinstallation upon completion of installing this exhaust kit.
- 2) Remove the old exhaust system at the clamp behind the converter y-pipe. Make sure to leave the existing O.E. rubber hanger mounts on the vehicle. Lower the driver's side of the upper control arm at this time by removing the metric bolts of the upper control arm from the frame, and swing the upper control arm lower for temporary clearance.
- 3) Install the i.d. end of the front extension pipe to the converter y-pipe using a 2-3/4" clamp. Tighten the assembly slightly, but do not over tighten at this time.
- 4) Install the rear over the axle pipe to the front extension pipe using a 3" clamp. We recommend making sure the upper control arm is lowered for clearance, the vehicle is lifted safely and the rear axle hangs free, and you install the rear over the axle pipe from the rear of the vehicle. Connect the hanger on the rear over the axle pipe to the O.E. rubber hanger mount above the rear over the axle pipe.
- 5) Install the muffler to the rear over the axle pipe using a 3" clamp. Do not tighten at this time. **Note:** the inlet should lie nearest the rear of the vehicle, and the outlets nearest the front of the vehicle (the rear over the axle pipe will cross over the top of the right tail pipe).
- 6) Install the passenger side tail pipe to the muffler using a 2-1/2" clamp, pivot the tail pipe for proper exit.
- 7) Repeat step 5) for the driver side. Two threaded hangers are included in this kit, one of which you will not use. They are adjustable to fit both the 96-97, and 98-02 models. Install the proper threaded hanger to the coupling nut on the driver side tail pipe, adjust to the proper height. 96-97 models will use the hanger with the double hook, the 98-02 the hanger with the single hook. Connect the hanger on the right tail pipe to the O.E. rubber hanger mount above, using the included hardware.
- 8) You may need to trim the tail pipes to length and style of desired exit.
- 9) Check for clearance of the frame and body, and of all brake and fuel lines. When you are satisfied with how the system hangs, tighten all bolts and clamps. Make sure to remember to reinstall the driver's side portion of the upper control arm and the heat shield.

BUILD SHEET FOR: CAT-BACK F-BODY KITS

PART #'s: 1059925

- _____ 1) FRONT EXTENSION PIPE—1059925-1
- _____ 1) REAR OVER THE AXLE PIPE—1059925-2
- _____ 1) #58742 MUFFLER
- _____ 1) PASSENGER SIDE TAIL PIPE—1059925-4
- _____ 1) DRIVER SIDE TAIL PIPE—1059925-3
- _____ 1) HARDWARE KIT

INSPECTED BY: _____

DATE: _____

INSPECTED BY: _____

DATE: _____

BUILD SHEET FOR: CAT-BACK F-BODY KITS

PART #'s: 1059925

- _____ 1) FRONT EXTENSION PIPE—1059925-1
- _____ 1) REAR OVER THE AXLE PIPE—1059925-2
- _____ 1) #58742 MUFFLER
- _____ 1) PASSENGER SIDE TAIL PIPE—1059925-4
- _____ 1) DRIVER SIDE TAIL PIPE—1059925-3
- _____ 1) HARDWARE KIT

INSPECTED BY: _____

DATE: _____

INSPECTED BY: _____

DATE: _____