

2007260

Fits 2013 Dodge Dart 2.0L


Hardware:

- | | |
|-----------------------------------|--|
| 1) # eg24095 gasket | 1) front resonator (flanged) # 2007261 |
| 2) # a25af 2-1/2" accuseal clamps | 1) s-bend extension pipe # 2007262 |
| 2) # a22af 2-1/4" accuseal clamps | 1) y-pipe # 2007263 |
| | 1) right rear muffler/pipe #2007264 |
| | 1) left rear muffler/pipe #2007265 |
| | 2) # 9222506 s/s tips |

INSTRUCTIONS:

NOTE: DO NOT TIGHTEN ANY CLAMPS UNTIL THE LAST STEP!!

- 1) Support the vehicle in a safe manner on a flat surface. Remove the exhaust system after the flange behind the converter pipe, leaving the O.E. rubber hanger mounts on the vehicle. You will need to reuse the studs at the flange and the O.E. nuts, use a lube if necessary to remove the O.E. hangers from the rubber hanger mounts.
- 2) Install the front resonator to the converter pipe flange using the O.E. gasket or the included new gasket, and reuse the O.E. hardware. Install the wire hanger to both of the o.e. mounts along the sides of the resonator.
- 3) Install the inlet end of the s-bend extension pipe to the resonator using a 2-1/2" clamp.
- 4) Install the ID end of the y-pipe to the s-bend extension pipe using a 2-1/2" clamp. Attach the hanger on the y-pipe to the O.E. hanger mount above the y-pipe.
- 5) Install the right rear muffler/pipe to the passenger side outlet of the y-pipe outlet using a 2-1/4" clamp. Install the hanger on the tail pipe portion to the O.E. rubber hanger mount above.
- 6) Install the left rear muffler/pipe to the driver side outlet of the y-pipe outlet using a 2-1/4" clamp. Install the hanger on the tail pipe portion to the O.E. rubber hanger mount above.
- 7) Install the s/s tips to the tail pipes.
- 8) Tighten all clamps (torque to approximately 40 ft-lbs) and the tips and check for clearance of all brake and fuel lines, and clearance of the frame and of chassis components.

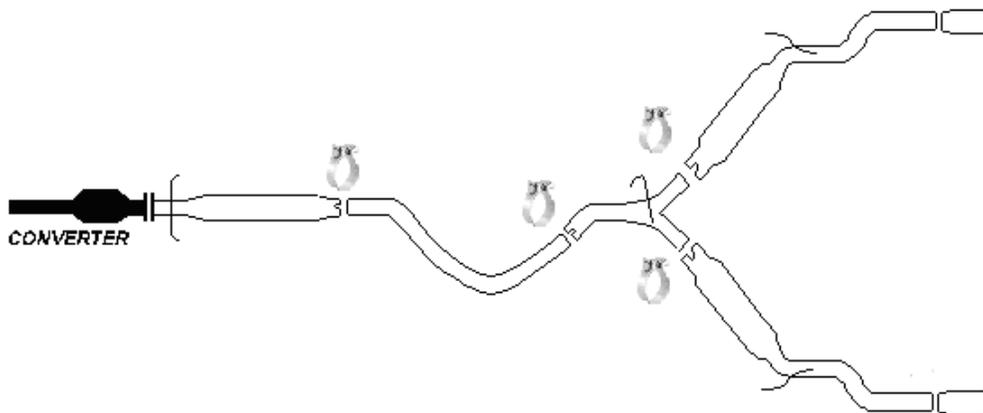

DANGER WARNING: Should the purchaser decide to install this exhaust product at home, be warned that pleasure car or light duty truck/van "bumper" jacks are intended for emergency use only. The use of frame contact jack stands in conjunction with a floor jack as main support is highly recommended to minimize accidental dropping of a vehicle while the installation proceeds.

2007260

Limitation of liability--Disclaimers: The regulation of emissions production, noise levels and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns and counties.

The manufacturer makes no warranties of merchantability, of fitness for a particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations or ordinances in the states where they may be sold to the ultimate purchaser, the consumer.

The entire risk as to the conformity of this product in any such state and as to repair, should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, and or repair.

The foregoing statement limits the liability of the manufacturer.

Heartthrob exhaust systems are manufactured by Heartthrob Exhaust--Litchfield, MN

Email us at mike@heartthrobexhaust.com with any questions.
www.heartthrobexhaust.com 320-693-0222

BUILD SHEET FOR: Dart DUAL KIT

PART #S: 2007260

- _____ 1) front resonator (flanged) # 2007261
- _____ 1) s-bend extension pipe # 2007262
- _____ 1) y-pipe # 2007263
- _____ 1) right rear muffler/pipe #2007264
- _____ 1) left rear muffler/pipe #2007265
- _____ 2) # 9222506 s/s tips
- _____ 1) hardware kit

inspected by: _____

date: _____

inspected by: _____

date: _____