

Part # 2007375

Kit fits **GM Colorado/Canyon** from '04-'05 with I5 motor, crew and extended cab models only (126" w.b.).  
Heartthrob Exhaust--Litchfield, MN [www.heartthroboxhaust.com](http://www.heartthroboxhaust.com) email: [mike@heartthroboxhaust.com](mailto:mike@heartthroboxhaust.com)  
Email us for detailed digital installation pictures. [www.heartthroboxhaust.com](http://www.heartthroboxhaust.com) 320-693-0222

**DANGER WARNING:** Should the purchaser decide to install this exhaust product at home, be warned that pleasure car or light duty truck/van "bumper" jacks are intended for emergency use only. The use of frame contact jack stands in conjunction with a floor jack as main support is highly recommended to minimize accidental dropping of a vehicle while the installation proceeds.

Limitation of liability--Disclaimers: The regulation of emissions production, noise levels and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns and counties.

The manufacturer makes no warranties of merchantability, of fitness for a particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations or ordinances in the states where they may be sold to the ultimate purchaser, the consumer.


The entire risk as to the conformity of this product in any such state and as to repair, should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, and or repair.

The foregoing statement limits the liability of the manufacturer.

#### **HARDWARE KIT:**

2) 7/16" lock washers	2) 7/16" nuts	2) 7/16" x 2" bolts	1) U300-2 flange
1) #2803 front hanger clamp	1) #2802 middle hanger clamp	1) #2801 rear hanger clamp	
1) front extension pipe--#2007371	1) front tail pipe--#2007372	1) #54144 muffler	1) rear tail pipe--#2007373

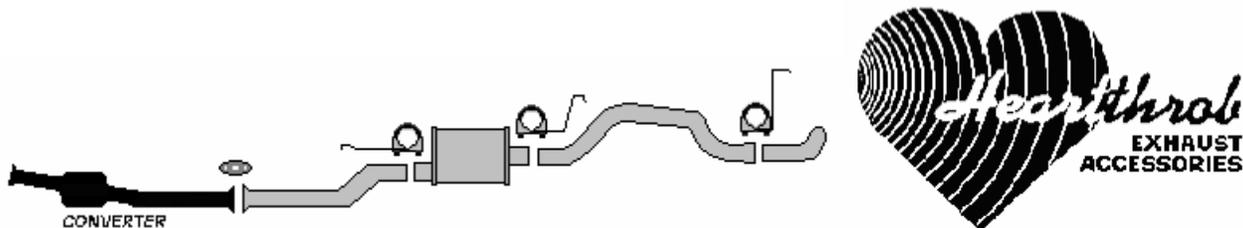

#### **INSTRUCTIONS:**

**NOTE:** do not tighten any clamps or nuts and bolts until the last step!! Before cutting any pipes it is a good idea to lay out all the included pipes along side the vehicle and get a good idea of how the pipes will hang on the vehicle. Please read the instructions fully and thoroughly before you begin.

- 1) Remove the exhaust system at the 2-bolt flange after the converter. Leave the wire hanger mounts on the truck, but remove the o.e. wire hangers that are on the o.e. pipes from these mounts, use a lubricant if necessary.
- 2) Slide the U300-2 flange over the front extension pipe and install the flanged end of the front extension pipe to the o.e. flange using the 7/16" x 2" bolts, nuts, and lock washers. Rotate the pipe to clear the cross member.
- 3) Install the muffler to the front extension pipe using the 3" front hanger clamp. The inlet of the muffler is offset, with a center outlet, with the inlet lying towards the drive shaft. Attach the wire portion of the hanger clamp to the o.e. mount along side the front extension pipe.
- 4) Install the inlet (long end) of the front tail pipe to the muffler. Use the 3" middle hanger clamp to connect the two pieces and the hanger. Attach the wire portion of the hanger clamp to the o.e. mount above.
- 6) Install the rear tail pipe to the front tail pipe using the 3" rear hanger clamp. Attach the wire portion of the hanger clamp to the o.e. mount above.
- 7) Tighten all clamps, nuts, and bolts. Check for clearance of all brake and fuel lines, and for clearance of all chassis and frame components.

Build Sheet For: 3" single cat-back kit

Part # 2007375

- \_\_\_\_\_ 1) hardware kit
- \_\_\_\_\_ 1) front extension pipe # 2007371
- \_\_\_\_\_ 1) front tail pipe # 2007372
- \_\_\_\_\_ 1) rear tail pipe # 2007373
- \_\_\_\_\_ 1) hvs muffler # 54144

inspected by: \_\_\_\_\_

date: \_\_\_\_\_

inspected by: \_\_\_\_\_

date: \_\_\_\_\_

Build Sheet For: 3" single cat-back kit

Part # 2007370

- \_\_\_\_\_ 1) hardware kit
- \_\_\_\_\_ 1) front extension pipe # 2007371
- \_\_\_\_\_ 1) front tail pipe # 2007372
- \_\_\_\_\_ 1) rear tail pipe # 2007373
- \_\_\_\_\_ 1) hvs muffler # 54144

inspected by: \_\_\_\_\_

date: \_\_\_\_\_

inspected by: \_\_\_\_\_

date: \_\_\_\_\_